

Unless you encounter a stud, each screw must be secured to the wall using the appropriate anchor.

Sheetrock/Wall Board:

Use **Decorator** anchor. Drill a pilot hole through the wall to determine if there is a stud beneath your mark. If not, insert #2 Phillips screwdriver into anchor. Press into pilot hole while turning the anchor clockwise until seated flush with wall. Repeat for each screw.

Tile/Marble:

Use **Plug** anchor. Using a glass/tile ¼" drill bit, drill hole where marked. Blow hole clean of dust. Tap anchor into hole until flush with surface.

Do not mount on acrylic or plastic type walls.

ALLEN WRENCH



PLUG ANCHOR



DECORATOR ANCHOR




INSTALLATION INSTRUCTIONS

1. Read mounting instructions for proper rod placement.
2. Assemble Crescent Rod. Hand tighten remaining screws. Do not use set screws at this time. (Cover or close the drain until screws are in.)
3. Measure: Hold rod up to desired position to check height and location. Be sure that rod is level. With a pencil lightly score marks at the top and bottom of the wall plate. Set rod down.
4. Remove retaining screws. Separate the wall plates from the rod. Leave Swivel connectors on rod.
5. Place wall plates back on wall at pencil marks.
6. Mark screw holes at 12 and 6 o'clock positions. Set wall plate aside.
7. Read anchor instructions carefully. Drill screw hole as marked. Install 4 anchors unless a hole is on a stud.
8. Mount wall plates. Screw completely into anchors.
9. Place rod, with swivel connectors attached, into wall plates. Screw in retaining screws. Tighten.
10. Adjust rod. Be sure that each end is into connectors far enough for set screw contact.
11. Insert and tighten set screws with the allen wrench.
12. Marvel at the difference!

ADJUSTMENTS

The Crescent Rod™ is designed to slide back and forth in the swivel connector adjusting for variations in the span between the walls.

Hardware:

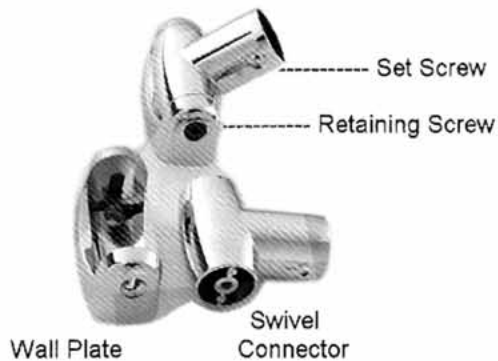

The wall plates and swivel connectors can go on either wall (i.e., no left or right bracket).

Note: The swivel connector can be inserted into the wall plate with the set screw facing up or down. When on top, the set screw helps keep the curtain ring close to the wall. Try it both ways for a while to see which you prefer.

Crescent Rod is a trademark of Shower Solutions, Inc. Patent D 397928
Other patents pending.

CUSTOMER SERVICE

Questions or problems?
Call between 9 am and 5pm CST

Phone (317) 831-2717
Fax (317) 831-3660

The Crescent Rod™ is designed to fit the most common 60" tub enclosures. Occasionally, because prior remodeling or non-standard tub size, you may encounter these situations:

1. Rod too Long:

If the rod is too long, the end can be cut with a tube cutter or hacksaw. Be sure to remove equal portions from each end to keep the contour centered.

2. Rod too short:

If the span between the walls is greater than 60" you will need to order a 72" rod. Call customer service with your name, phone number, exact span measurement, rod finish (chrome, white, etc.), and mailing address.


Hotel Vanities International L.L.C.
5514 Stockwell Court
Indianapolis, IN. 46237
(317) 787-2330

The Crescent Rod™

Mounting Instructions

For 60" Standard Tub:

Mount rod approximately 3" inside the point a straight rod is normally mounted. The midpoint of the rod should extend several inches past the outside rim of the tub.

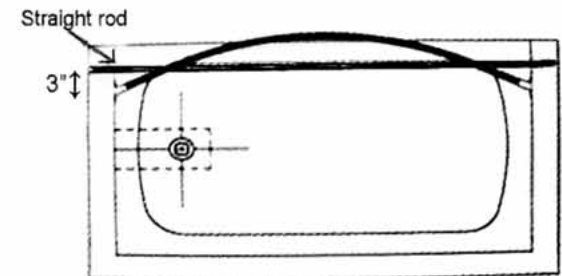

For 60" Oval Tub:

Depending upon tub model, mount rod between 6" and 8" from centerline of the tub. The middle portion of the rod should curve just outside the contour of the tub.

